



Light Controller Replacement in SimplySnap

The Replace Light feature allows a new lighting controller to be added to the system without reconfiguring zones, names, or settings. The replacement controller automatically assumes the identity and configuration of the device it replaces.

To replace a controller, use the following steps:



Step 1 - Login to the SimplySnap site controller.

Step 2 – From the devices and zones list, find the controller you wish to replace. The controller should be in alarm (e.g. Pole 1-B).

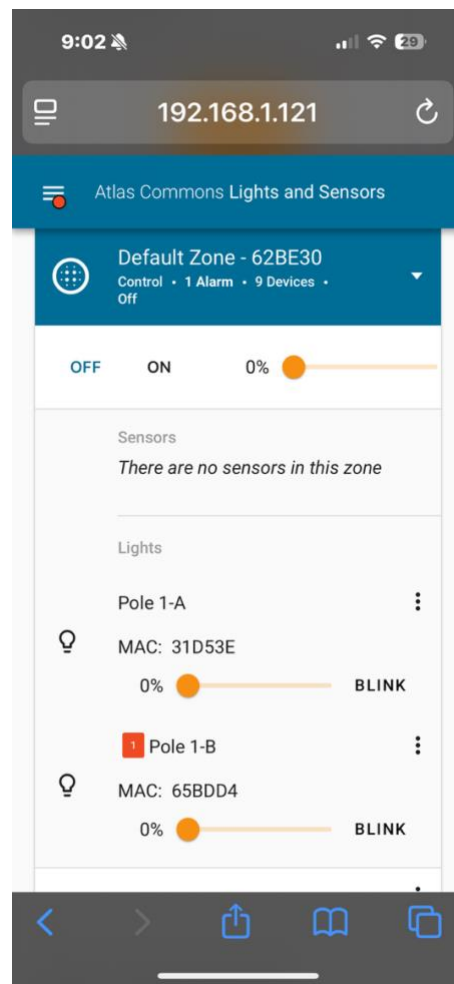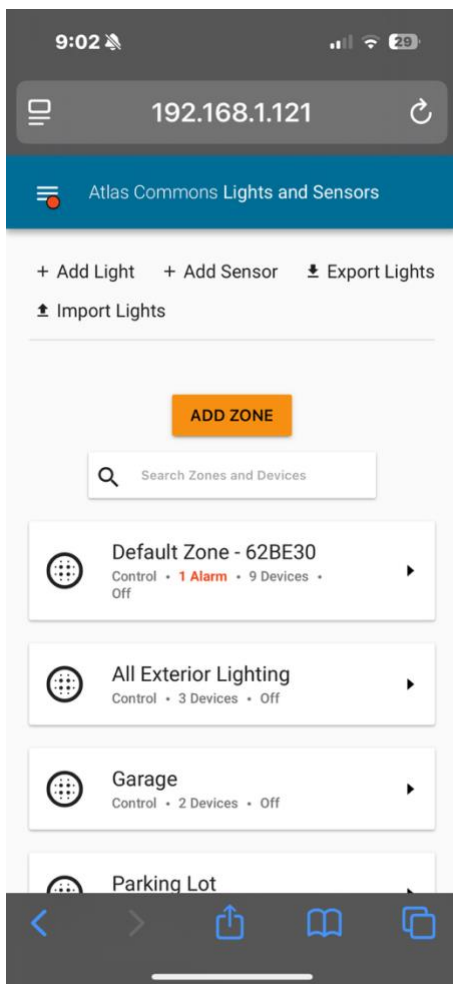



Step 3 - Select the three dots on the right side of the row to open additional options.

Step 4 – Select “Replace Light”.

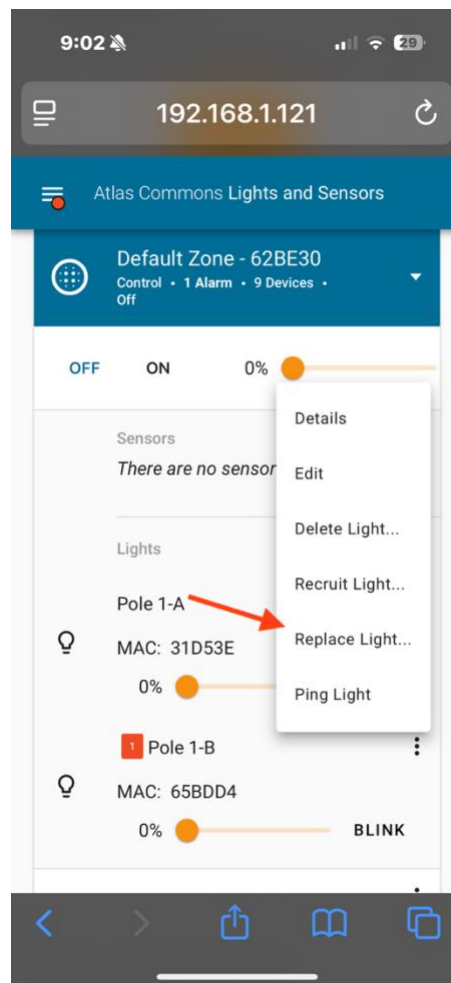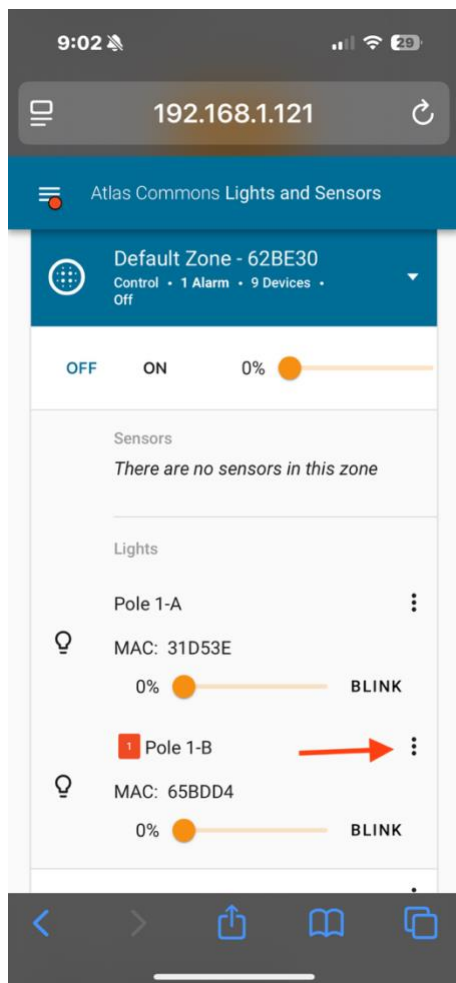

Step 5 – Enter the new SNAP address. In this example, 65bd04 is the MAC address of the replacement controller. Enter this value and then select the REPLACE button. The MAC address can be found on the sticker pack included with the new controller.

SimplySnap will automatically select a nearby commissioned controller and move it to the default network to help recruit the replacement light. Once the new device joins the commissioned network, you'll see the "Configuring 1 device" message at the bottom of the screen.

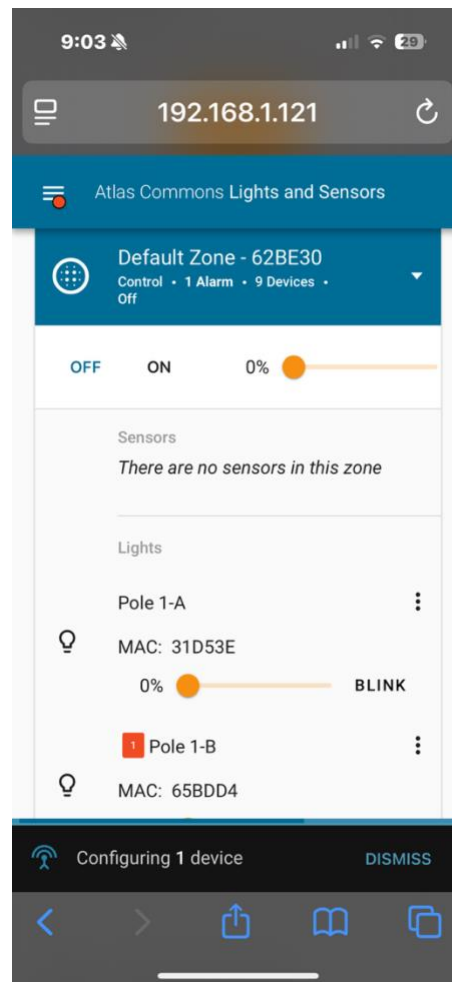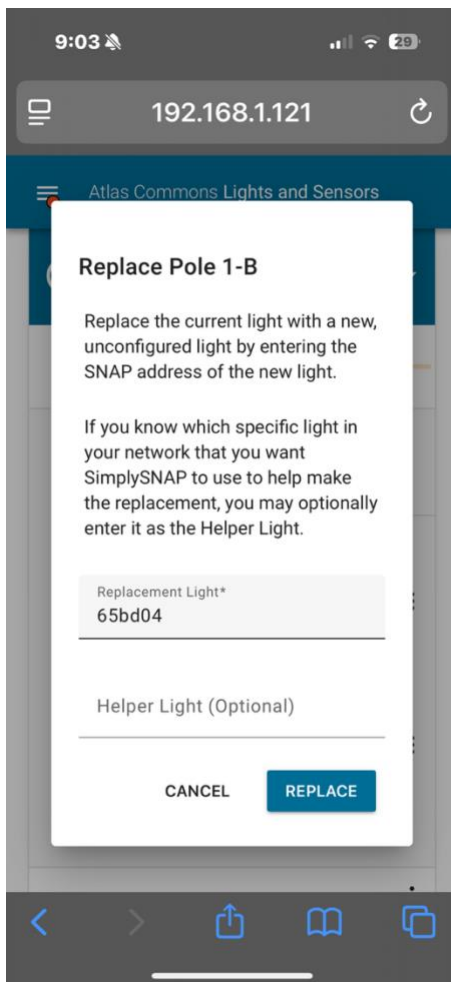

When the device configuration process is complete, the alarm will clear, and the light should turn on at full brightness.

